

- It is the customer's responsibility to return the faulty appliance for any warranty claim.
- Warranty does not cover the ceramic disc; this is a wearing replaceable part available from your local stockist.
- For any warranty to be valid, an original proof of purchase must be provided.
- Do not let body parts such as fingers touch the ceramic disc or black water sensor or come within 10cm. It is not dangerous but can cause local pain.

IMPORTANT SAFEGUARDS

- The transformer is under no circumstances intended to be placed in the pond or water feature, it must therefore be located within three meters of the pond or water feature in a suitably dry and protected position. It should be out of direct sun light and preferably mounted at least 30cm above ground level.
- Do not operate the Mist Maker if the Mist Maker or any of its components, such as the cord have been damaged in any way.
- Always use a properly grounded power supply that is connected to an RCD of less than 30mA.
- Always unplug the Mist Maker from the power supply when not in use or before performing any maintenance on the Mist Maker. Never pull the cord to disconnect the plug from the power supply. Grasp the plug and pull to disconnect.
- Do not cut the cord as this will result in voiding your warranty.
- Care should be taken to arrange the power cord so that it cannot be accidentally tripped over or pulled.
- Do not attempt to repair the Mist Maker yourself. Return to an authorized service centre or place of purchase if a fault occurs.
- Do not use in water above 30°C.
- Do not attempt to use this transformer on any other device without first verifying



SUBMERSIBLE MIST MAKER



INSTRUCTIONS MANUAL

Manufactured for:

AQUATEC EQUIPMENT

PO Box 648, Maddington, Western Australia, 6989

Telephone (08) 9452 2444

Email info@aquatecequipment.com

www.aquatecequipment.com



SUBMERSIBLE MIST MAKER

	SINGLE DISC MIST MAKER	3 DISC MIST MAKER
VOLTAGE (V)	240 – 24V	240 – 24V
POWER (WATTS)	1	4
CABLE LENGTH (M)	1.8	10
DISC SIZE (MM)	16	20

Congratulations on your purchase of this great addition to your pond or water feature. Please check the list of parts to see that you have everything that should come in the kit.

DESCRIPTIONS & FEATURES

Your Aquapro Mist Maker has been manufactured with advanced technology to provide you with the best quality Mist Maker accessory for your pond.

- The Aquapro Mist Maker vaporizes the water creating harmless water vapor.
- The Mist Maker comes with LED lights to colour the mist creating dramatic visual effects.
- The transformer converts the power supply to a safe 12volt for peace of mind in your garden.
- Comes with an automatic water level sensor to turn off the Mist Maker when water is too low.

INSTALLATION

- If required, have a qualified electrician install weather proof power point near to the pond, (within 3 meters so the Mist Maker cable will reach the

transformer).

- Mount the transformer in a dry and protected location making sure that it can't be wet by either rain or reticulation.
- Please use clean tap water, do not use distilled or boiled water.
- We recommend using a Mister Floater to position the Mist Maker at the right level in the water. Place the Mist Maker in the Mister Floater or in desired location ensuring the black water level sensor is approximately 2cm below the surface of the water. Place the transformer for the Mist Maker in desired location taking care not to wet the plug that attaches to the transformer.
- Connect the Mist Maker lead to the transformer and turn on the power to the transformer.
- Take care to ensure the splashing of the small jets of water does not go outside the water container.

MAINTENANCE

There is minimal maintenance requires on the Mist Makers, the Mist Maker should be

inspected on a regular basis to ensure the Mist Maker or cable is not damaged in any way.

The Mist Maker should be cleaned regularly to ensure maximum efficiency. Do not use any abrasive household cleaners. Clean with a soft cloth and clean water.

After approx 8-12 months the ceramic discs may require replacement. The mist will diminish or stop.

REPLACING THE CERAMIC DISC

- Unplug the Mist Maker from the power and remove from the water.
- Using the tool/ key (supplied with your replacement ceramic disc), insert the key into the winding ring and turn in a counter clockwise direction.
- Remove the winding ring and filler piece (washer) and ceramic disc.
IMPORTANT: There is a front and a back of the ceramic disc. Be sure to reinstall the new one correctly, with the plain (side

without black ring) facing up.

- Install the new ceramic disc in the reverse order of the above.
IMPORTANT: The inside on the cavity must be completely dry before the parts are installed.

LIMITED WARRANTY

- Warranty covers only appliance defects and faulty material and workmanship within a 2 year period.
- Faults arising due to; accidents, misuse, not following manufacturer's guidelines/ instructions or power surges/spikes/ brownouts will not be covered.
- Warranty will be void if any tampering removal of warranty labels or electrical is evident.
- Loss of livestock, damage to property or personal injury caused by this product will not be covered
- Warranty claims caused by installation faults will not be covered.

